

Work Order ID 149390

July 22, 2016 3:10:18 PM

149390

AmoD
DG

Page 1

Item ID: D3562-041 Accept *N900040100* Setup Start *NS1*
 Revision ID: Stop *NS2*
 Item Name: Step Weldment
 Start Date: 9/22/2016 Start Qty: 3.00 *3* Cust Item ID:
 Required Date: 9/30/2016 Req'd Qty: 3.00 *3* Customer:
 Reference:

Approvals: Process Plan: SLA Date: 7/25/16 Tooling: _____ Date: _____ Run Start *NR1*
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
D3562	G								
100	Large Fab	0.00							
100									
Large Fab	Memo	0.33							
Large Fab	1-Cut D2622 extrusion as per Dwg D3562 2-Deburr and bevel ends for welding								
110	QC- Inspect dimensions to drawing	0.00							
110									
QC	Memo	0.00							
Quality Control									
120	Chemical Conversion Coat per QSI005 4.1	0.00							
120									
HandFinish	Memo	0.07							
Hand Finishing									

3 16-10-18

(3) 16-10-19

DAS
9
9-89

(X3) 2016/10/20
BEB

DQA: _____ Date: _____

WORK ORDER NON-CONFORMANCE / UPDATE



QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :				MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Description Work Order Deviation				Disposition					
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐							
		OTHER : ☐							

Work Order ID 149390

July 22, 2016 3:10:18 PM

149390

Page 2

Item ID: D3562-041 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Step Weldment
 Start Date: 9/22/2016 Start Qty: 3.00 ***3*** Cust Item ID:
 Required Date: 9/30/2016 Req'd Qty: 3.00 ***3*** Customer:
 Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
130	QC7-Inspect Chemical Conversion Coat	0.00							
130						3		OCT 27 2016	DAS 24
QC	Memo	0.00							9-89

Quality Control

140
140
 Small Fab
 Small Fab
 Small Fab

Small Fab
 Memo
 1- Transfer drill Rivet holes as per dwg D3562.
 2-Touch-up rivet holes with alodine as per dwg d3562
 3-Rivet legs using Scotch-Weld as per dwg D3562.
 *****Ensure to wipe off any excess magnobond *****

A/R Scotch-Weld DP460
 Batch: 135579

EXP DATE:

9/17

3 FF NOV 02-16

P10

DQA:

Date: 2017-02-16



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed:

Date:

JAN 31 2017

Work Order update only ☐

Work Order: 149390		DISPOSITION		AGAINST DEPARTMENT/PROCESS					
Part No. D3562-04		Rework ☒		Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐		
NCR No. 17-6249		Scrap ☐		Machining ☐	Small Fab ☒	Prod. Eng. Coord. ☐	Quality ☐		
		Use-as-is ☐		Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐		
		Suspected Unapproved ☐		Large Fab ☐	Composite ☐	Supplier ☐			
Date: 16-11-16		Step #: 140		QTY Effective: ①			MRB (QSI042) Approval		
Description Work Order Deviation		Disposition			DAS 9			9-89 16.11.16	
EMPLOYEE INSTALLED STEP LEG ^{D3560} ON THE WRONG SIDE OF HIS MEASUREMENT. D3562-1 SCRAP & REPLACE R.C. operator		Scrap D3562-1 1x and replace Scrap D3562-1 1x and replace			Completed By			FF 16.11.08	
					Lead hand / Supervisor			Approval Verification	
					DAS 24			9-89	
					NOV 08 2016				
					QC / QA Coordinator			DAS Approval	
					9			9-89 16.11.16	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☒	Positioned Wrong ☒				
Design ☒	Operator ☒	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐								
Misidentified ☐	Past Due ☐	OTHER :							

July 22, 2016 3:10:18 PM

Page 3

[illegible]



Work Order update only ☐

Work Order: _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS					
Part No. _____				Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐		
NCR No. _____				Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐		
				Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐		
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	
Root Cause Environment ☐ No Re-verification ☐ Design ☐ Operator ☐ Doc/Data ☐ Offset/Setup ☐ Equip/Tooling ☐ Supplier ☐ Handling/Pre ☐ Training ☐ Material ☐ Use for Testing ☐ Internal Transport ☐ Poor Information ☐ Tribal Knowledge ☐ Rushing ☐ LOA ☐ Product Improvement ☐ Substation ☐ Process Improvement ☐ Past Expiry Date ☐ Manufacturing Process ☐ Misidentified ☐ Past Due ☐				FAULT CATEGORY ☐ Pressure/Forced ☐ Temperature/Cure ☐ Power Loss/Surge ☐ Positioned Wrong ☐ Bending ☐ Set-up ☐ Folio/Program ☐ Outside Dimensions ☐ Centre Not Concentric ☐ BOM/Route ☐ Grain ☐ Over/Under tolerance ☐ Cracks ☐ Broken/Damage/Defect ☐ Weld ☐ Part Incorrect ☐ Crimp/Kink/Ripple/Wave ☐ Inspection Incomplete/Unqualified ☐ Wrong Stock Pulled ☐ Part Lost/Missing ☐ Cuffs ☐ Contamination ☐ Out of Sequence ☐ Part Moved ☐ Crushing ☐ Countersink ☐ Off-set ☐ Drawing ☐ Heat Treat ☐ Cut Too Short ☐ Mislabeled ☐ Finish ☐ Wave/Twist in Tube ☐ Instructions Incomplete/Unclear ☐ Fit/Function ☐ Misread ☐ Marks/Chatter ☐ Drill Holes ☐ Misaligned/off center ☐ Turning Sequence					
OTHER :									

Work Order ID 149390

July 25, 2016 1:46:30 PM

149390

Page 4

Item ID: D3562-041 Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Step Weldment
Start Date: 9/22/2016 Start Qty: 3.00 ***3*** Cust Item ID:
Required Date: 9/30/2016 Req'd Qty: 3.00 ***3*** Customer:
Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
180 *180* QC Quality Control	QC5- Inspect part completeness to step on W/O Memo	0.00 0.01				<u>3</u>			DAS 38 9-89 NOV 09 2016
190 *190* HandFinish Hand Finishing	Chemical Conversion Coat per QSI005 4.1 Memo	0.00 0.13				(x3)	g		2-6/11/10 BEB
201 *201* SprayPaint Spray Painting	Spray Painting per QSI005 4.2 Memo PRIME AS PER QSI 005 PRIME BATCH 135971 135654 PAINT AS PER QSI 005 DRAB GREEN BATCH 135971	0.00 0.00				<u>3</u>			DAS 41 9-89 16-11-11

July 25, 2016 1:46:30 PM

Page 5

DAS
15
9-89

Work Order ID 149390

July 25, 2016 1:46:30 PM

149390

Page 6

Item ID: D3562-041 Accept *N900040100* Setup Start *NS1*
Revision ID: Stop *NS2*
Item Name: Step Weldment
Start Date: 9/22/2016 Start Qty: 3.00 *3* Cust Item ID:
Required Date: 9/30/2016 Req'd Qty: 3.00 *3* Customer:
Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start *NR1*
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
230	Identify as per dwg & Stock Location: <i>W/O</i>	0.00							
230									
Packaging	Memo	0.00				<i>3x</i>			<i>16/11/15</i>
Packaging									<i>DAS 36 9-89</i>
240	QC21- Final Inspection - Work Order Release	0.00							
240							<i>DAS 21 9-89</i>	NOV 15 2016	
QC	Memo	0.05							
Quality Control									

NOV 15 2016

DAS 21 9-89

Picklist Print

July 22, 2016 3:10:18 PM

Page 1

Work Order ID: 149390

149390

Parent Item: D3562-041

D3562-041

Parent Item Name: Step Weldment

Start Date: 9/22/2016

Required Date: 9/30/2016

Start Qty: 3.00

Required Qty: 3.00

Comments: IPP Rev:A New Issue 06-11-09 JLM
IPP rev B ECN 987 07.10.09 EC verified by: DD
IPP Rev:C ECN1048 07-12-18 DD verified by:ec
IPP Rev:D 08-07-28 add chemical conversion coat DD verf:EC IPP REV:E
13.06.03 PER DWG REV.F DD VERF:JLM IPP REV:F 16.06.23
AS PER DWG REV.G DD VERF:JLM

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
MS20600-AD4W4		Purchased	No				Each	1,544.000		96		NOV 09 2016	DAS 24 9-89
MS20600-AD4W4									**				
Rivets													

Location	Loc Qty	Loc Code
CCK005	1270	
M133990	770	
M134955	500	
LG	74	
M133694	74	
ST308	140	
M133990	140	
WA003	60	
M133990	60	

D2622-120C

Manufactured No

100 Each 117.7360 1 3

D2622-120C

Step Extrusion

Location	Loc Qty	Loc Code
WA003	97.736	
130161	0.236	
141814	97.5	
WA004	20	
140539	20	

B150070

135442 → 96

3 16-10-18

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval 		
Description Work Order Deviation				Disposition					
								Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	

Root Cause				FAULT CATEGORY			
Environment ☐	Design ☐	Doc/Data ☐	Equip/Tooling ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐
Handling/Pre ☐	Material ☐	Internal Transport ☐	Tribal Knowledge ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐
LOA ☐	Substation ☐	Past Expiry Date ☐	Misidentified ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐
				Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐
				Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐
				Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐
				Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐
				Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐
				Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐
				Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐
				OTHER : ☐			

Picklist Print

July 22, 2016 3:10:18 PM

Page 2

Work Order ID: 149390

149390

Parent Item: D3562-041

D3562-041

Parent Item Name: Step Weldment

Start Date: 9/22/2016

Required Date: 9/30/2016

Start Qty: 3.00

Required Qty: 3.00

D2734

Manufactured No

140 Each 55.0000 2 6

D2734

Step End Plate

**

CC 16-11-9

Location

Loc Qty

Loc Code

WA003

55

B151475 →

⓪

145802

55

D3560-041

Manufactured No

140 Each 1.0000 1 3

D3560-041

Arm Weldment

**

NOV 09 2016

DAS
24
9-89

Location

Loc Qty

Loc Code

WA003

1

149377 → 3

124288

1

D3560-043

Manufactured No

140 Each 0.0000 1 3

D3560-043

Arm Weldment

**

B149337

3 C 16-11-1

DQA: _____ Date: _____




WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
		OTHER : _____			

ITEM	QTY -041	P/N	DESCRIPTION
	X	D3562-041	LH STEP ASSEMBLY
1	1	D3560-041	ARM WELDMENT
2	1	D3560-043	ARM WELDMENT
3	1	D3562-1	STEP ASSEMBLY
4	32	MS20600AD4W4	RIVET, BLIND

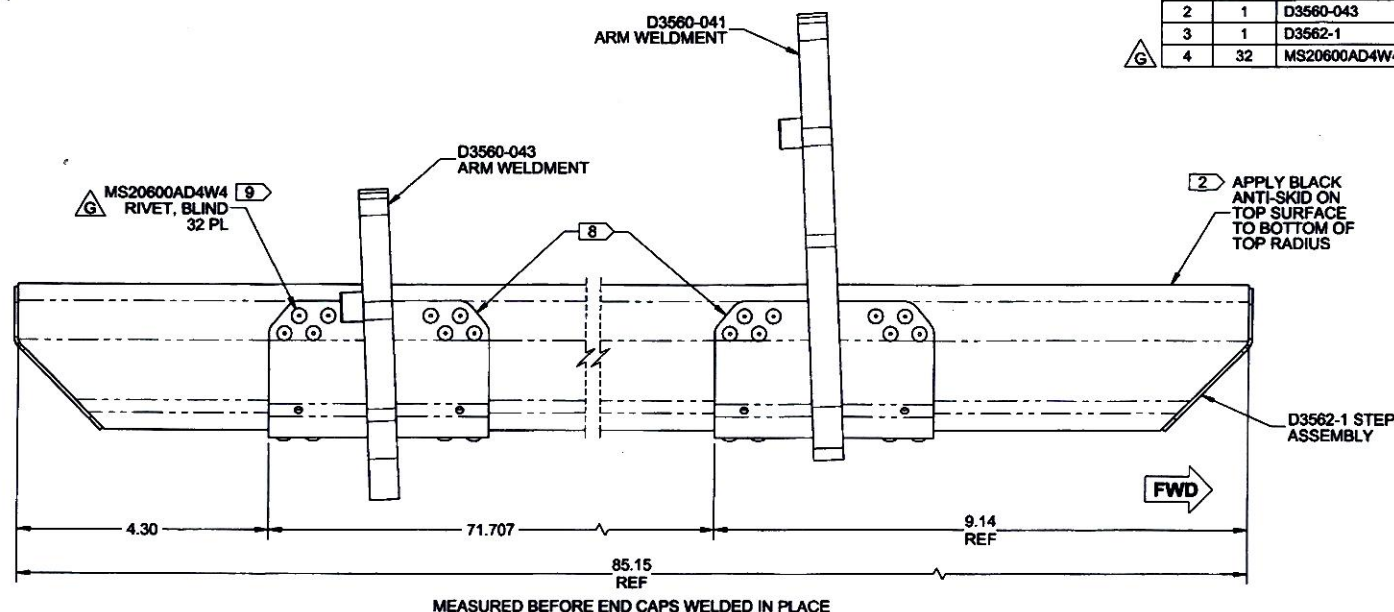


RELEASED

2016 JUN 22 07
ECN 16-66

NOTES:

- 1) MATERIAL: N/A
- 2) FINISH:
 - i) POWDER COAT ASSEMBLY:
GLOSS WHITE (4.3.5.1) OR
GREY SANDTEX (4.3.5.6) OR
BLACK SANDTEX (4.3.5.7) OR
GREEN SANDTEX (4.3.5.8) PER DART QSI 005 4.3
 - ii) BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
- 6) IDENTIFICATION: NONE
- 7) WEIGHT: 8.80 lbs
- 8) INSTALL ARM WELDMENTS WITH A LAYER OF SCOTCH-WELD DP460 BETWEEN THE ARM WELDMENT AND STEP EXTRUSION. FILL ANY TOOLING HOLES WITH SCOTCH-WELD DP460. CLEAN OFF EXCESS BEFORE POWDER COATING.
- 9) TRANSFER DRILL #30 DEBURR & TOUCH UP HOLES WITH CHEMICAL CONVERSION COAT BEFORE RIVETING

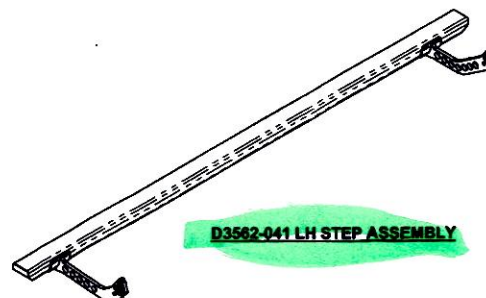


D3562-041 LH STEP ASSEMBLY

G	MS20600AD4W4 WAS MS20600AD4W5. REF. PAR16-517.	MB	16.04.21
F	REVISED NOTE 8 TO REMOVE MAGNOBOND, REPLACE WITH SCOTCH-WELD DP460, REF. PAR12-224. ADDED NOTE 9 AND SHEET 2	DW	13.06.15
E	ADD QTY(2) TO D2734 END PLATE ON D3562-042	PH	08.01.11
D	REMOVE D2808 SPACER NOTE; REDRAW IN SOLIDWORKS	DC	07.11.16
C	NOW MAGNOBOND, ADD D2808, REMOVE 4 RIVETS	CP	07.06.19
B	ARMS NOW RIVETED TO STEP	CP	07.01.15
A	NEW ISSUE	CP	06.09.26
REV.	DESCRIPTION	BY	DATE
DESIGN	CP	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	MB		
CHECKED	ML	DRAWING NO.	REV. G
MFG. APPR.	DD	D3562	SHEET 1 OF 3
APPROVED	WM	TITLE	SCALE
DE APPR.	DS	STEP ASSEMBLY	NTS
DATE	16.04.21	COPYRIGHT © 2008 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL, AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	


APPROVED

ITEM	QTY -042	P/N	DESCRIPTION
	X	D3562-042	RH STEP WELDMENT
1	1	D3560-042	ARM WELDMENT
2	1	D3560-044	ARM WELDMENT
3	1	D3562-1	STEP ASSEMBLY
4	32	MS20600AD4W4	RIVET, BLIND

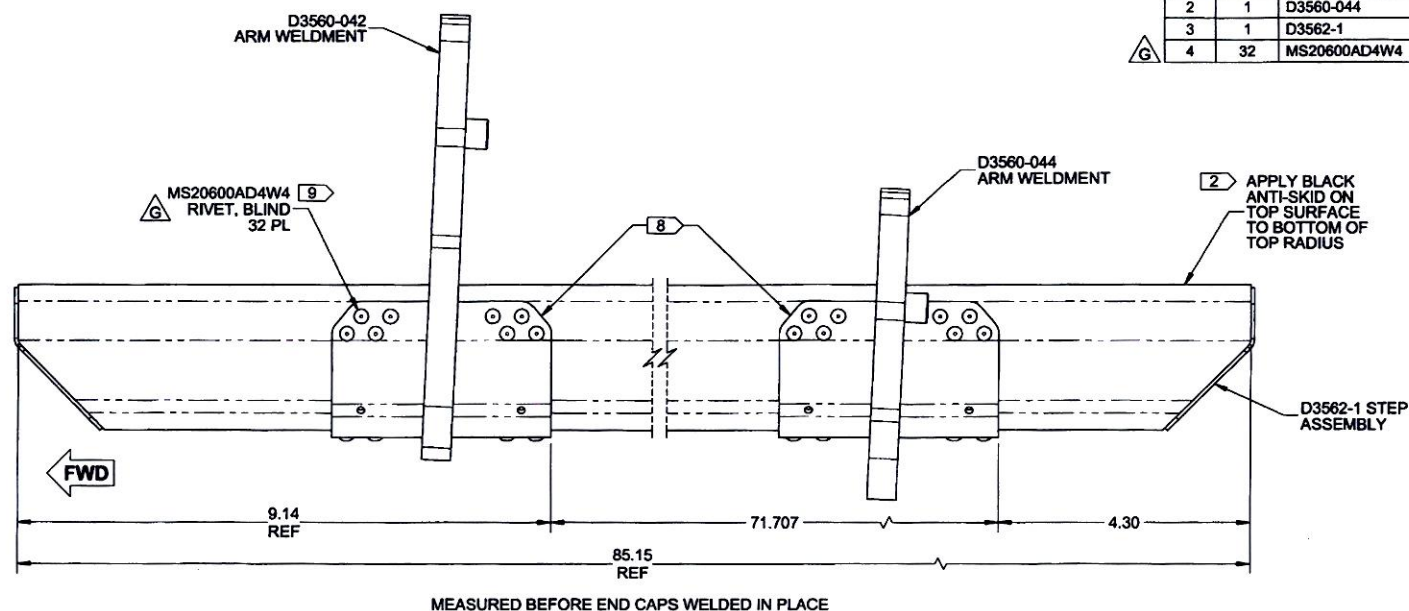

NOTES:

- 1) MATERIAL: N/A
- 2) FINISH:
 - i) POWDER COAT ASSEMBLY:
 - GLOSS WHITE (4.3.5.1) OR
 - GREY SANDTEX (4.3.5.6) OR
 - BLACK SANDTEX (4.3.5.7) OR
 - GREEN SANDTEX (4.3.5.8) PER DART QSI 005 4.3
 - ii) BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
- 6) IDENTIFICATION: NONE
- 7) WEIGHT: 8.80 lbs
- 8) INSTALL ARM WELDMENTS WITH A LAYER OF SCOTCH-WELD DP460 BETWEEN THE ARM WELDMENT AND STEP EXTRUSION. FILL ANY TOOLING HOLES WITH SCOTCH-WELD DP460. CLEAN OFF EXCESS BEFORE POWDER COATING.
- 9) TRANSFER DRILL #30 DEBURR & TOUCH UP HOLES WITH CHEMICAL CONVERSION COAT BEFORE RIVETING

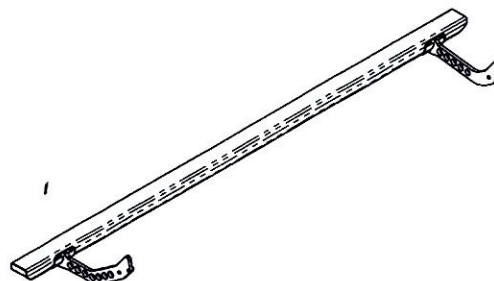

D3562-042 RH STEP ASSEMBLY


RELEASED

2016 JUN 22 *ap*


APPROVED

DESIGN	CP	DART AEROSPACE LTD	
DRAWN	MB	HAWKESBURY, ONTARIO, CANADA	
CHECKED	ML	DRAWING NO.	REV. G
MFG. APPR.	DD	D3562	SHEET 2 OF 3
APPROVED	WM	TITLE	SCALE
DE APPR.	DS	STEP ASSEMBLY	NTS
DATE	16.04.21	COPYRIGHT © 2006 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

ITEM	QTY -1	P/N	DESCRIPTION
	X	D3562-1	STEP ASSEMBLY
1	A/R	D2622-XXX	STEP EXTRUSION
2	2	D2734	END PLATE

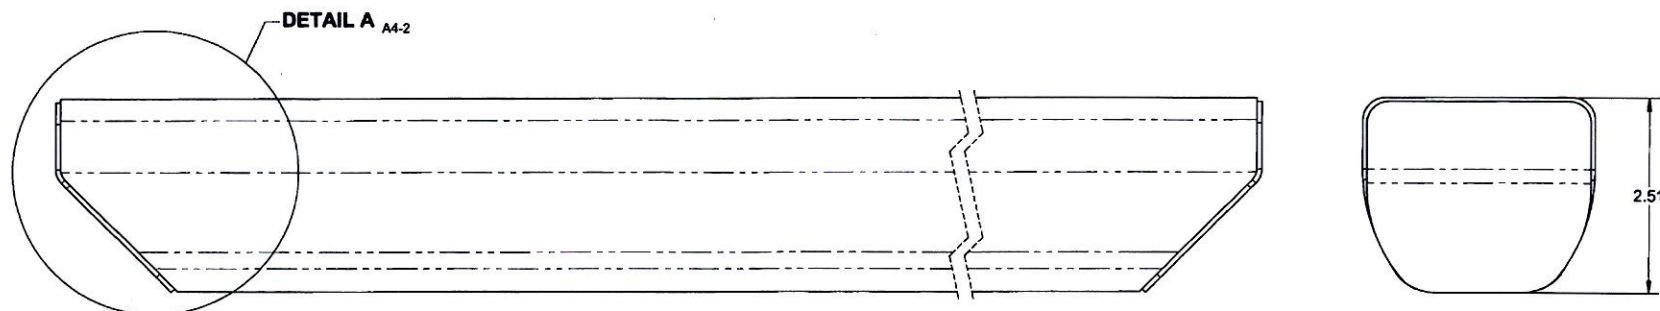

D3562-1 STEP ASSEMBLY

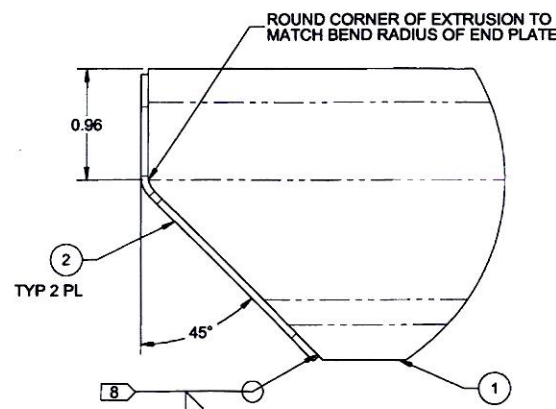

DETAIL A D6-2
TYP BOTH ENDS
SCALE 1.5X

NOTES:

- 1) MATERIAL: MAKE FROM D2622 EXTRUSION
- 2) FINISH: CHEMICAL CONVERSION COAT STEP EXTRUSION
PER DART QSI 005 4.1 BEFORE ASSEMBLY
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
- 6) IDENTIFICATION: NONE
- 7) WEIGHT: 6.68 lbs
- 8) WELDING: ALL WELDS SHALL BE 100% VISUALLY INSPECTED
BY A QUALIFIED INSPECTOR PER DART QSI 004

RELEASED

2016 JUN 22 *qr*

APPROVED

DESIGN	CP	DART AEROSPACE LTD	
DRAWN	MB	HAWKESBURY, ONTARIO, CANADA	
CHECKED	ML	DRAWING NO.	REV. G
MFG. APPR.	DD	D3562	SHEET 3 OF 3
APPROVED	WM	TITLE	SCALE
DE APPR.	DS	STEP ASSEMBLY	NTS
DATE	16.04.21	COPYRIGHT © 2008 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	